


Installing the Card


1. Turn off your workstation and monitor(s).
2. Disconnect any existing monitor cable(s) from the back of your workstation.
3. Remove the workstation cover. If necessary, consult your workstation manual for assistance.
4. Discharge any static electricity by touching the metal surface of the workstation chassis.
5. Remove any existing graphics card(s) from your workstation. Save any screws used to secure the card.
6. Locate the PCI Express™ slot, if necessary, remove the metal backplate cover and save any screws.
7. Align your FireGL™ card with the PCI Express™ slot, then press it in firmly until the card is fully seated. When handling the card, hold it by its edges, and avoid touching its circuitry.
8. Replace the screws on the top of bracket to fasten the card in place.

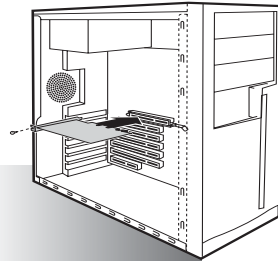

Connecting Power to the Card

Due to their parallel processing architecture, some ATI graphics accelerators require more power than the average graphics card.


1. With your workstation still turned off, locate the graphics power cable coming from the power supply.
2. Connect the power cable to the 6-pin power connection on the graphics card.
3. Screw in or fasten the graphics card securely. Make sure the cables are not interfering with anything inside the computer (for example, a cooling fan) and replace the computer cover.

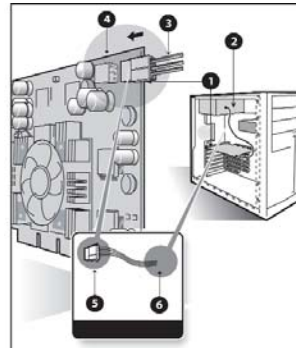

Connecting the Monitor(s)

Your FireGL™ accelerator can drive one or two display devices simultaneously (monitors or digital flat panels) and will allow you to mix and match display types and resolutions.

1. Plug the video cable of the first display to the connector on the card labeled "1". To connect a VGA monitor to a DVI-I connector, use the included adapter.
2. If using a second display, plug it in to the connector labeled "2". Some FireGL™ cards have dual DVI-I connectors, while others have a single DVI-I connector and a single VGA connector. For more information, consult your FireGL™ User Guide on the CD-ROM.

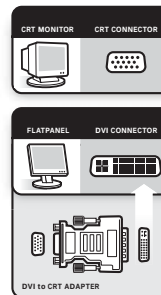

Installing the Software Drivers

1. Turn on your workstation and display device(s).
2. Insert the FireGL™ CD-ROM.
3. Click on "Install Software" and follow the on-screen instructions.

FireGL™ Control Panel

Open the Display control panel and click on the Advanced button. Use the Configuration tab to set resolutions, enable multiple monitors, and optimize performance for your software application.

Troubleshooting

If you experience any problems during installation, double check the steps above.

Troubleshooting information and FAQs may be found on the ATI web site at ati.com/FireGL™.

Your ATI FireGL™ CD-ROM contains a User's Guide in Portable Document Format (PDF). The User's Guide describes in detail the features and functions of your ATI FireGL™ accelerator and the associated software.

Don't forget to register your new product at: ati.com/FireGL



Customer Care

Advanced technical support for FireGL™ products is available from your authorized ATI workstation solution provider, or directly from ATI's dedicated workstation support team via the internet, email or phone. To receive technical assistance you must first register your product with ATI.

ATI recognizes that your time is critical. In the event that your FireGL™ product requires replacement, ATI offers an Advanced Parts Replacement Service. For more details or to request a Return Merchandise Authorization (RMA) please contact an ATI workstation Customer Care Representative.

For product information, driver updates and Frequently Asked Questions visit ati.com/FireGL.

Contact Information

Internet:

ati.com/FireGL

Phone: North America

1-866-284-2093

or 905-882-2600

(Monday - Friday, 9:00 AM - 7:00 PM EST)

Europe

+49-180-3-347345

(Monday - Friday, 10:30 AM - 7:00 PM GMT)

Mail:

ATI TECHNOLOGIES INC.
Attention: Customer Care
1 Commerce Valley Drive East
Markham, Ontario
Canada L3T 7X6

Printed in Canada

PN 500026800

No reproduction of this document in any form is permitted without prior written authorization from ATI Technologies Inc.

Copyright © 2004 All rights reserved.

ATI FireGL

In no event shall ATI be responsible or liable for any damages, including but not limited to the loss of revenue or profit, arising from the use of the product, or from the loss of use of the product, as a result of any event, circumstance, action or abuse beyond the control of ATI, whether such damages be direct, indirect, consequential, special or otherwise and whether such damages are incurred by the person to whom this warranty extends or a third party.

ATI makes no other representations or warranties as to fitness for a particular purpose, merchantability or otherwise in respect of the product. No other representations, warranties or conditions, shall be implied by statute or otherwise.

The liability of ATI in respect of any defective product will be limited to the repair or replacement of such product. ATI may use new or equivalent-to-new replacement parts. Defective product will be sent in for repair or replacement only.

All warranties for this product, expressed or implied, shall extend to any person who purchases the product in a used condition.

ATI warrants for this product, expressed or implied, will expire three (3) years from date of original purchase. All accompanying cables and accessories are warranted for 90 days. No warranties for this product, expressed or implied, shall extend to any person who purchases the product in a used condition.

Limitations

For a detailed description of the ATI Hardware Warranty Service Statement visit <http://ati.com/online/warranty/statement>

Should your ATI FireGL™ product malfunction within the warranty period, ATI will at its discretion repair or replace the product upon receipt of the product. Any replaced parts become the property of ATI. This warranty does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs, or modifications.



Quick Installation Guide

ati.com/FireGL



Congratulations

You are now the owner of a high-performance ATI FireGL™ workstation graphics accelerator with native PCI Express™ x16 lane support. This guide provides a quick overview of the steps required to install your new graphics card. Complete documentation for your FireGL™ card is available as a Portable Document Format (PDF) file on the FireGL™ driver CD, or available for download at ati.com/FireGL.

Register Online

To activate your warranty and become eligible for customer service please register your FireGL™ product on the ATI web site at ati.com/FireGL. To complete the product registration you will need to know the part number of FireGL™ card you purchased and the serial number. These numbers are listed on a sticker on the back of the card, and on the box. For future reference write this information in the space provided below before installing the card:

Part Number: _____ Serial Number: _____ Purchase Date: _____

Installation Requirements

- Workstation with one available PCI Express™ x16 lane slot.
- 128MB of system memory (256MB recommended for better performance).
- CD-ROM drive or Internet connection for software driver installation.
- Supported operating systems:
 - Windows® 2000 with Service Pack 1 (or higher) or Windows® XP
 - Linux XFree86 4.2.0, XFree86 4.3.0